

24 Hour DVD Rental Center

To rent:

1. Insert your credit or debit card.
2. Choose "Continue" (use the arrows beside and below the screen to make your selection).
3. Choose "Select"
4. Select "DVD"
5. Choose which category you want by scrolling down with the top and bottom arrows to the right of the screen, then choose "Confirm" at the bottom of the screen. (You may also search alphabetically using the search choice on the bottom of the screen.)
6. Use the first and last arrows to the right of the screen to scroll through movie titles screen by screen. White boxes to the left of the titles indicate that the particular movie is available to rent.
7. On individual title screens, scroll up and down to your selection by using the two middle arrows to the right of the screen.
8. Once you have highlighted your choice, choose "Rent".
9. A new screen will pop up. Choose "Rent" again.
10. Take your movie from the machine.
11. Press "End" until you exit the system.
12. Pull your receipt.

To return:

1. Insert your credit or debit card.
2. Choose "Return" using the arrow at the bottom of the screen.
3. Wait for door to open. Insert the DVD with the bar code facing up.
4. When finished, select "End" until you exit the system.
5. Pull your receipt.



For Technical Assistance Call
8 6 6 . 8 4 . V I D E O

(8 6 6 . 8 4 8 . 4 3 3 6)

www.moviesngames.us